

## Grundeinstellung


### Basic setting

### Réglage de base

Grundeinstellung

Basic setting

Réglage de base

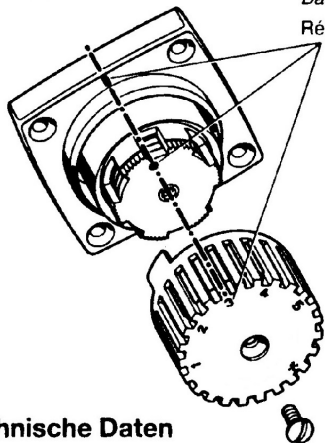

# Honeywell Home




## Einbau- und Bedienungs-Anleitung Installation and Operating Instruction Instructions de montage et d'utilisation

## Technische Daten

### Technical datas

### Caractéristiques techniques

Hysterese <i>Hysteresis</i> Hystérésis	0,4 K
Heizmitteltemperatureinfluß <i>Effect of heat conduction</i> Influence de la température du fluide chauffant	0,5 K / 30 K
Differenzdruckeinfluß <i>Effect of change in differential pressure</i> Influence de la pression différentielle	0,4 K
Schließzeit <i>Closing time</i> Temps de fermeture	25 min
Kapillarrohrlänge <i>Length of capillary tube</i> Longueur du capillaire	2 (5) m

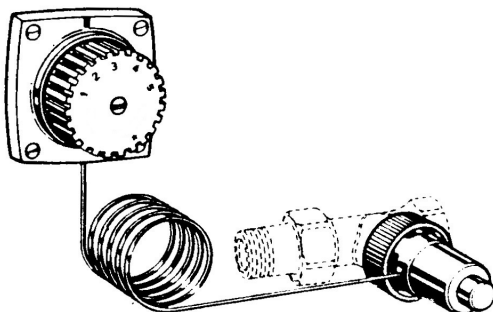

T 100 MZ

### For more information

[homecomfort.resideo.com/europe](http://homecomfort.resideo.com/europe)



Manufactured for and on behalf of the  
Pittway Sàrl, La Pièce 4, 1180 Rolle, Switzerland  
by its Authorised Representative Ademco 1 GmbH  
MU1H-1505GE25 R0620

Subject to change  
© 2020 Pittway Sàrl. All rights reserved.

This document contains proprietary information of  
Pittway Sàrl and its affiliated companies and is  
protected by copyright and other international  
laws. Reproduction or improper use without specific  
written authorisation of Pittway Sàrl is strictly  
forbidden. The Honeywell Home trademark is used  
under license from Honeywell International Inc.

Ademco 1 GmbH  
Hardhofweg 40  
74821 MOSBACH  
GERMANY  
Phone: +49 6261 810  
Fax: +49 6261 81309

## Thermostat-Oberteil mit Fernverstellung Thermostatic Unit with remote control adjustment Tête thermostatique avec sonde à distance


**Einbau und Einstellung  
Installation and Adjustment  
Montage et Réglage**

Schutzkappe abschrauben


*Remove protection cap*

Retirer le capuchon de protection

Braukmann V100

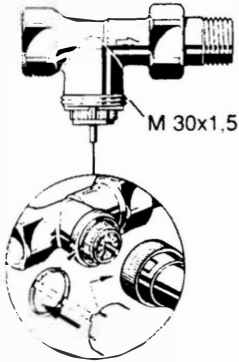


MNG/Honeywell V2000  
(Heimeier)

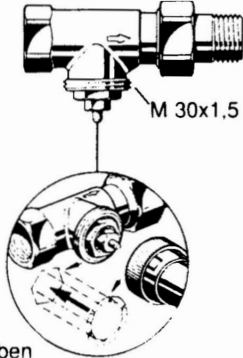

Anschlußstück aufschrauben

*Screw on thermostatic unit*

Visser la tête thermostatique

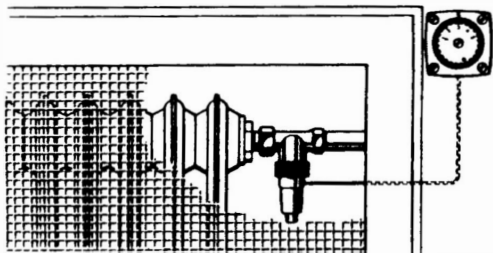


Thermostat anschrauben

*Mounting of Thermostatic Unit*

Visser la tête thermostatique

Dübel · Dowel · Cheville

Ø 6 mm

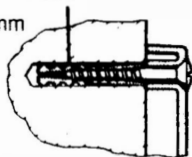

Linsensensschraube

*Screw*  
Vis de fixation tête  
conique

4 x 35

Wandbefestigung

*Mounting in wall · Fixation murale*

**Sollwertbereiche**

Zuordnung der Sollwerte zu den Merkfziffern auf dem Einstellgriff

**Temperature ranges available**

*Coordinating temperature ranges to reference numbers on thermostatic unit*

**Réglage du point de consigne**

Correspondance des graduations avec les températures souhaitées


Raumtemperatur °C  
*Room temperature °C*  
Température ambiante °C

9	16	18	20	22	24	26
*	1	2	3	4	5	

Merkfziffern

*Reference numbers*

Graduation

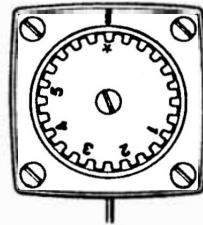


**\* = 9°C**

**Frostschutz**

**Anti-freezing mark**

**Position hors gel**

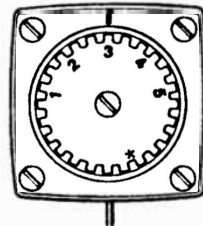


**3 = 20°C**

**Grundeinstellung**

**Basic setting**

**Réglage de base**

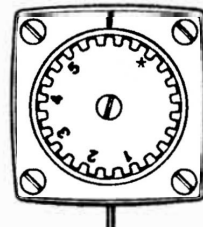

**= 26°C**

**bis zum Anschlag  
aufgedreht**

**Fully open**

**Tourner jusqu'à  
rencontrer une  
resistance**