


## Braukmann BA295S

Einbau-Anleitung für Ersatzteile • Installation Instructions for spare parts

### 1. Austausch Kartuscheneinsatz • *Exchange of valve cartridge insert*


**1**

Absperrventile schließen  
*Close shutoff valves*

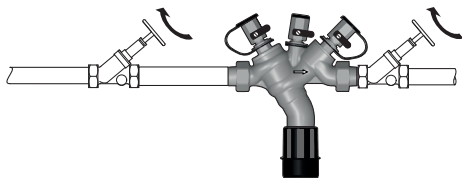


**2**

Kurz über Kugelhähne druckentlasten  
*Briefly vent the appliance through the ball valves*

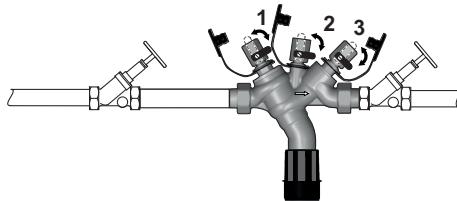


**3**

Gehäuse öffnen  
*Unscrew the valve cap from the housing*

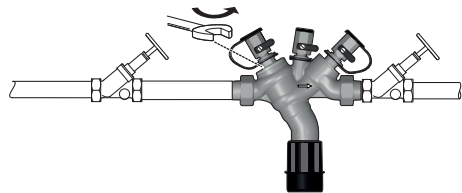


**4**

Kartuscheneinsatz austauschen  
*Exchange the valve cartridge insert*

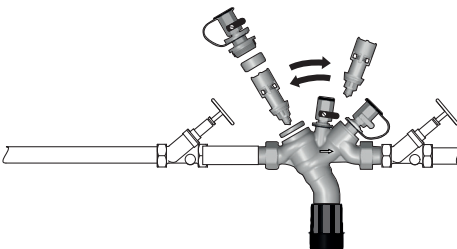


**5**

Gehäuse schließen  
*Screw the valve cap back into the housing*

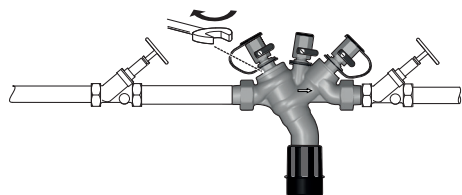

**6**


Absperrventile öffnen  
*Open shutoff valves*

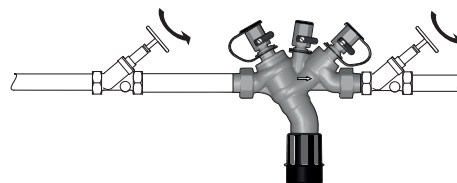

## 2. Austausch Kartuscheneinsatz • Exchange of valve cartridge insert


1

Absperrventile schließen  
*Close shutoff valves*

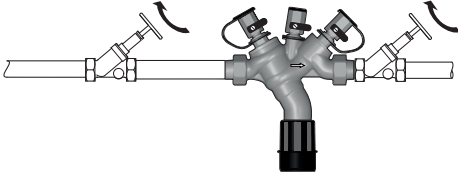


2

Kurz über Kugelhähne druckentlasten  
*Briefly vent the appliance through the ball valves*

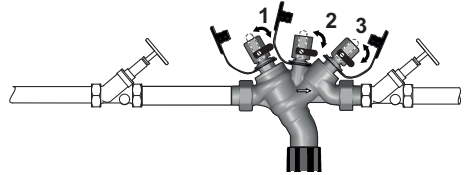


3

Gehäuse öffnen  
*Unscrew the valve cap from the housing*

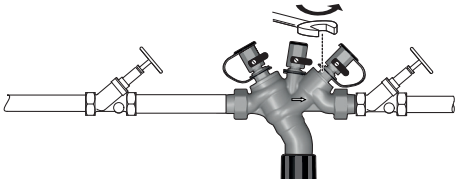

4


Rückflussverhinderer austauschen  
*Exchange the check valve*

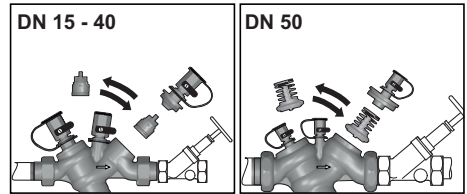

Achtung, Teil steht unter Federspannung  
*Caution, part is spring-loaded*


5

Gehäuse schließen  
*Screw the check valve cap back into the housing*

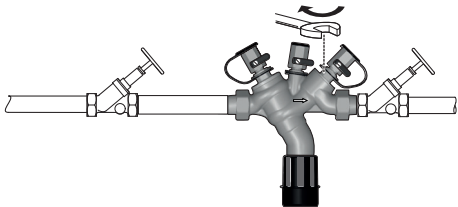

6

Absperrventile öffnen  
*Open shutoff valves*

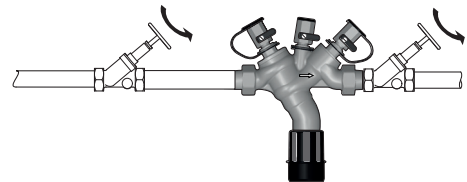

Manufactured for  
and on behalf of  
Pittway Sàrl, Z.A., La Pièce 4,  
1180 Rolle, Switzerland  
by its authorised representative  
Ademco 1 GmbH

For more information  
[homecomfort.resideo.com/europe](http://homecomfort.resideo.com/europe)

Ademco 1 GmbH, Hardhofweg 40,  
74821 MOSBACH, GERMANY

Phone: +49 6261 810  
Fax: +49 6261 81309